



# INSTALLATION INSTRUCTIONS & PART DIAGRAM

## Eliaison® *Easy Swing*® Double Action Doors

### Compact Hardware

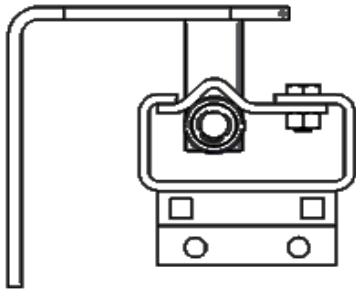


JAMB MUST BE SQUARE AND PLUMB  
A MINIMUM OF 3-1/2 INCH WIDE JAMBS  
REQUIRED TO MOUNT HARDWARE

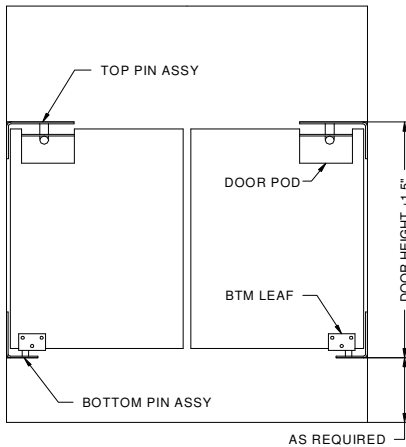

1. Measure width and height of framed opening and compare width dimensions given at time of ordering. (This model was cut to the dimensions given by the customer and is not adaptable to fit into a different size opening.)
2. Position bottom pin assembly in desired location of floor and center on side jamb. Secure to jamb using four 1-1/2" screws supplied.
3. Locate top pin assembly by using height of the door + 1-1/2". This dimension is from the bottom of the bottom pin assembly to the top of the top pin assembly. Secure top pin assembly to side jamb using four 1-1/2" screws supplied.
4. Slip door over bottom pin and lift slightly to slide door pod over bearing plate. Line up holes and insert bolts supplied. Partially install lock nuts, move door to closed position and secure lock nuts.
5. Install covers and secure four 1/2" screws supplied per door.


#### 150-14 - Top Pin Assy

- (4) 1/4" - 20 x 1" phil. flt hd. thread cutting screws
- (4) #14 - 1-1/2" phil. flt hd. sheet metal / wood screws

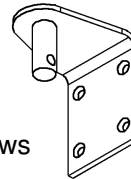

100-874 - Bearing Plate with (2) 5/16 - 18 screws, (2) 5/16 - 18 lock nuts

170-31 - 3/8" Axle



170-30 - (2) Rollers



170-28 - (2) Kliprings



100-900/901(LH/RH) - (2) Aluminum Covers, (4) screws (LWP-CAFE)

OR

100-898SS/899SS(LH/RH) - (2) SS Covers, (4) screws (SCP-CAFE, PMP GATE)


OR

170-186XX/170-185XX (LH/RH) - (2) ABS Covers, (4) screws (P11-PLUS GATE)



150-16 - Bottom Pin Assy (4) of each fastener listed under 150-14

100-585 - Bottom Pin Bushing (LWP Model only)



## ELIASON®

CORPORATION

www.eliasoncorp.com

P.O. Box 2128, Kalamazoo, MI 49003  
 Telephone: 800-828-3655 / 269-327-7003  
 Fax: 800-828-3577 / 269-327-7006  
 E-mail: doors@eliasoncorp.com